

# INSTALLATION INSTRUCTIONS

## FOR

### #1345 HINSON-FEMCO WEATHER BRAKE

#### FITS MASSEY FERGUSON 135, 2135 (GAS OR DIESEL)

Listed below are the special parts required for the proper installation of the 1345 Hinson-Femco Weather Brake. Carefully study the photo diagrams showing the location of each part. Follow the various steps numerically. Each part has Part Number stamped on it.

- |                                       |                                     |                                   |
|---------------------------------------|-------------------------------------|-----------------------------------|
| 1 - #712100201 Yoke                   | 1 - #712569401 Door Post Brace-Hood | 1 - #712569501 Right Yoke Support |
| 1 - #712569201 Door Post              | 1 - #712569601 Side Arm             | 1 - #720756905 Door Assembly      |
| 1 - #712569301 Door Post Brace-Center |                                     | 1 - #712569801 Door Latch         |

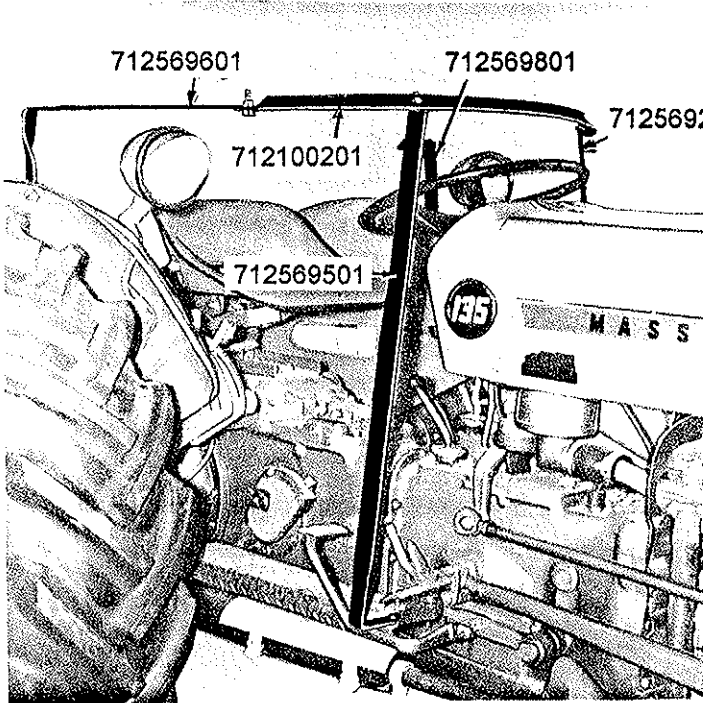


Figure 1

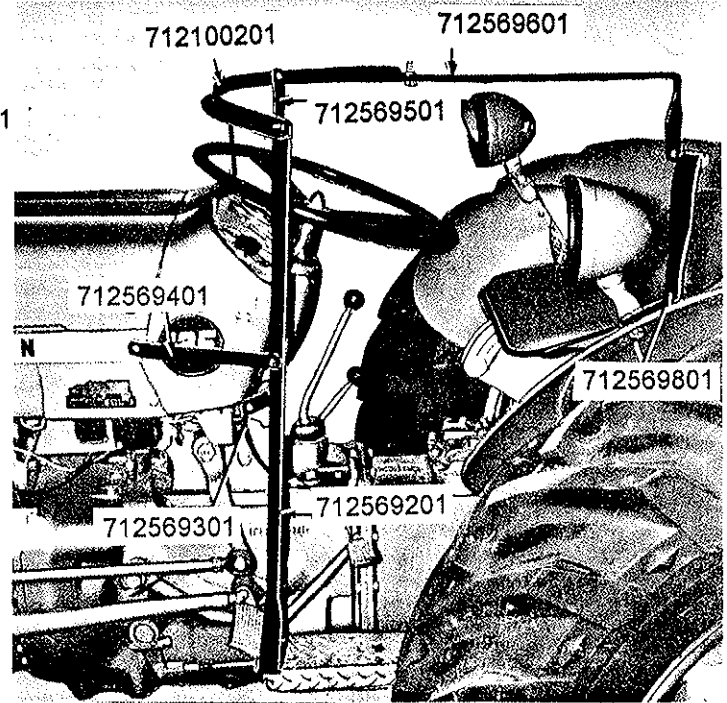


Figure 2


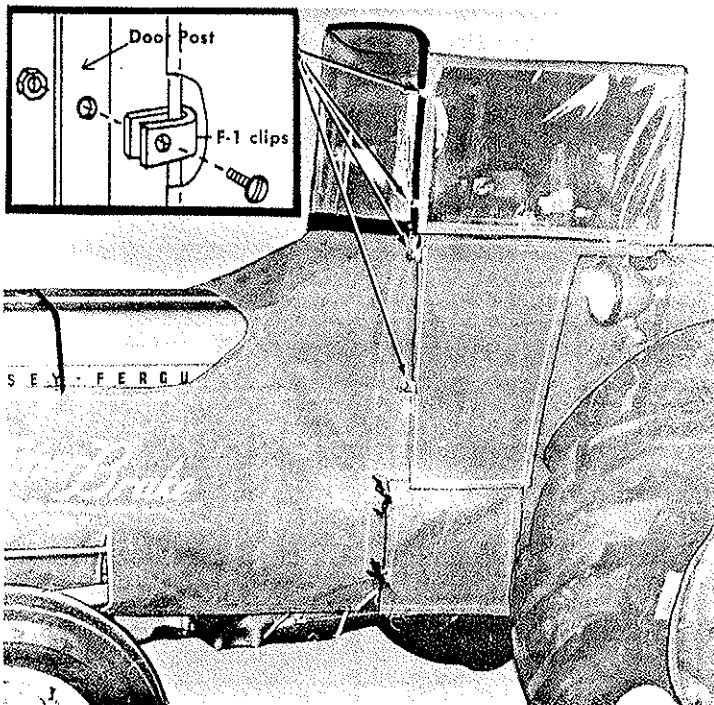


Figure 3


1. Bolt #712569201 door post to left step using 5/16" x 1" hex head bolt and nut. Bolt front edge of #712569401 hood brace to tractor using 1/4" x 1 hex head bolt and nut. See Figure 2.
2. Bolt #712569301 center brace to steering column under sheet metal using 7/16" x 3/4" bolt. See Figure 2.
3. Bolt #712569501 right yoke support to tractor using two (2) 5/16" x 1" bolts and nuts as shown in Figure 1.
4. Place cover over tractor sliding wide hem on left side over door post. Then slide #7121002001 yoke into hem at top of cover. Bolt #712569201 door post and right support yoke to yoke using 1/4" x 1" bolts and nuts. See Figure 2.
5. Slide #712569601 side arm into hem on right side. Bolt to yoke and to fender using 3/8" x 1 1/2" hex head bolts and nuts. See Figures 1 and 2.
6. Bolt center brace and hood brace to door post using 5/16" x 1" bolt and nut. See Figure 2.
7. Straighten cover and tie to adjust all straps and springs for a proper fit.
8. Attach door to door post with F-1 clips and 3/16" x 3/4" stove bolts and nuts. Tie tapes through grommets in front of bottom flap. See Figure 3.
9. Remove bolt holding light on left fender and bolt #712569801 door latch under light bracket. See Figures 2 and 3.

# WINDSHIELD ASSEMBLY INSTRUCTIONS


1252  
1258  
1263

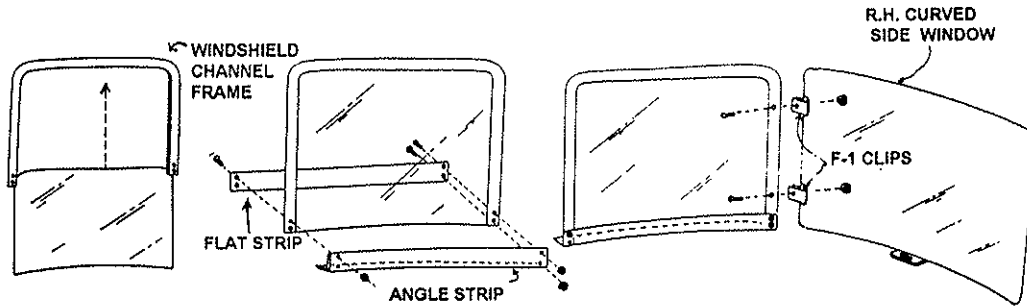

1. Slide glass in channel of windshield frame.
2. Assemble flat strip and angle strip to windshield channel using two  $3/16"$  x  $1/2"$  bolts in top holes and  $1/4"$  x  $1"$  bolts in lower holes. Tighten nuts.
3. Cuts slots in vinyl as shown in picture, insert F-1 clips in slots of R.H. curved side window. Secure this assembly to windshield channel frame with  $3/16"$  x  $3/4"$  bolts.

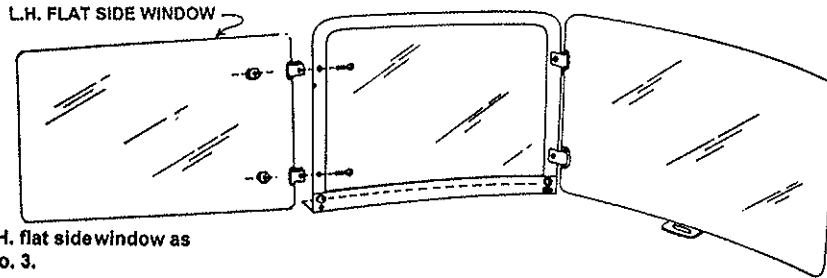

4. Install L.H. flat side window as in step No. 3.

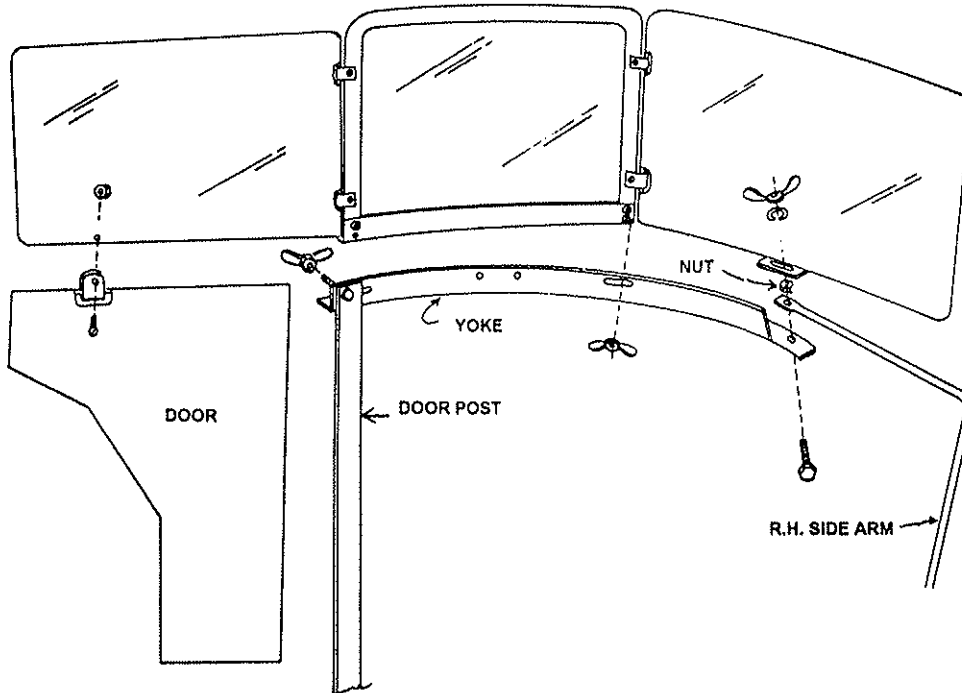

6. Place windshield assembly on yoke so bolt in lower right hand corner of windshield fits into slot in yoke. Place hole in lower left corner over bolt in top of door post. Secure with wing nuts.
8. Secure right side window to rear edge of yoke as shown using flat lock washer and nut.
7. Insert F-1 clip in cut out in top of door, punch hole through canvas in L.H. flat side window as shown. Secure with  $3/16"$  x  $3/4"$  bolt.

**FEMCO, Inc.**

**GENERAL OFFICES**  
500 North 81 By-Pass  
P.O. Box 1186  
McPherson, Kansas 67460  
Phone: 1-316-241-3513  
FAX: 1-316-241-3532  
Toll Free: 1-800-677-0898

*Subsidiaries*  
**HINSON-FEMCO**  
**JANTZ-FEMCO**  
**FEMCO PLASTICS**  
**AMERICAN PRIDE**  
**GOLF PRODUCTS**