

INSTALLATION INSTRUCTIONS

FOR

#914 HINSON-FEMCO WEATHER BRAKE

FITS FORD 8N

Listed below are the special parts required for the proper installation of the 914 Hinson-Femco Weather Brake. Carefully study the photo diagrams showing the location of each part. Follow the various steps numerically. Each part has Part Number stamped on it.

- 1 - #712100201 Yoke
- 1 - #712580201 Side Arm
- 1 - #720685902 Door
- 1 - #712580101 Attaching Brkt.
- 1 - #712580501 Door Support Bar
- 1 - #712581401 Door Latch

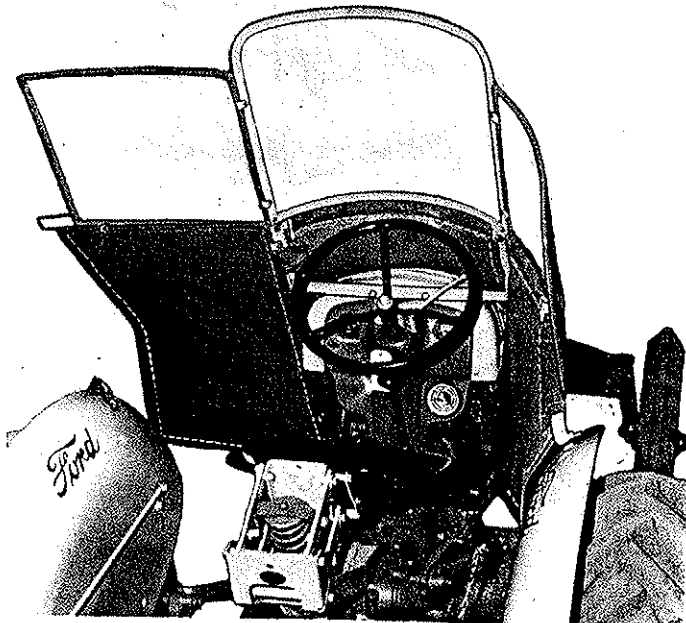
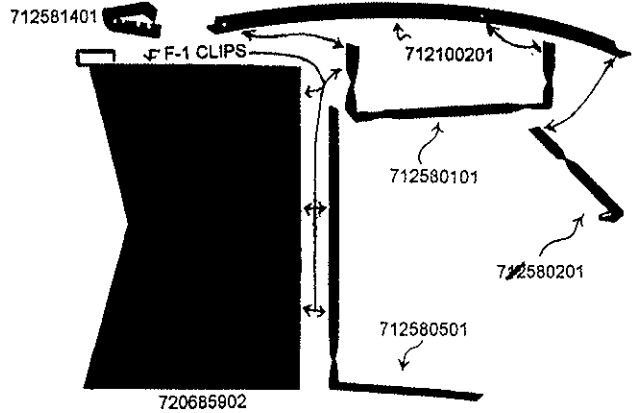


Figure 1

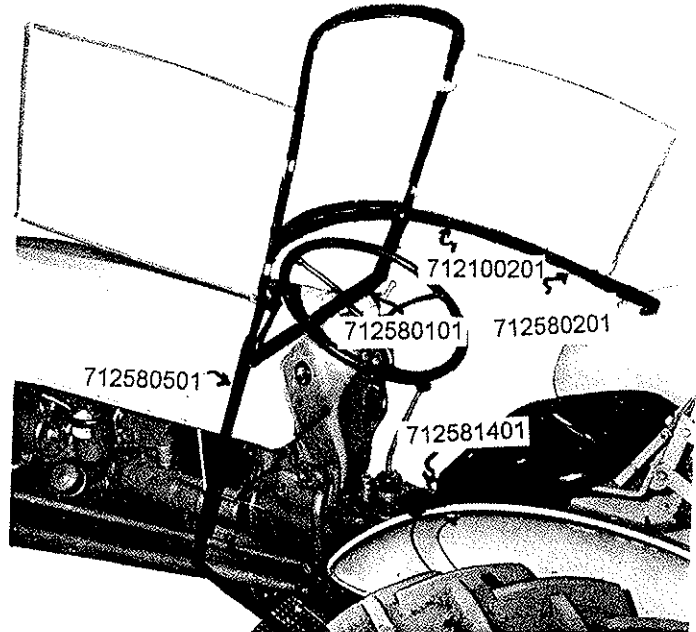


Figure 2

Fasten the U-shaped attaching bracket to cowl using bolt positions already on tractor. Insert the Yoke in the center hem of the vinyl cover and lay cover in position over the tractor. Bolt the yoke to the top holes on attaching bracket using 1/4" x 1" bolts. These bolts also hold the windshield in place. See Figure 1.

Insert right side arm in hem of vinyl cover and attach to yoke and right mudguard. Insert the door support bar in the hem of the left side of the vinyl cover. Bolt it to the attaching bracket and to the left platform. See Figure 2.

Bring vinyl sides forward and fasten spring ties around the radiator, over and under the tractor. Cut slots in the vinyl door for the F1 clips, then bolt the F1 clips to the door support bar. Attach door latch to the left mudguard. Tighten all nuts and adjust vinyl cover to fit. See Figure 3.


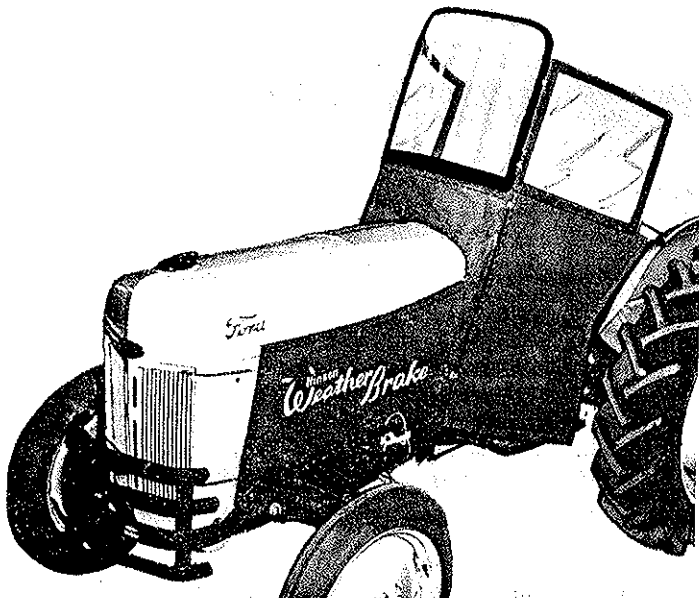



Figure 3

WINDSHIELD ASSEMBLY INSTRUCTIONS


1252
1258
1263

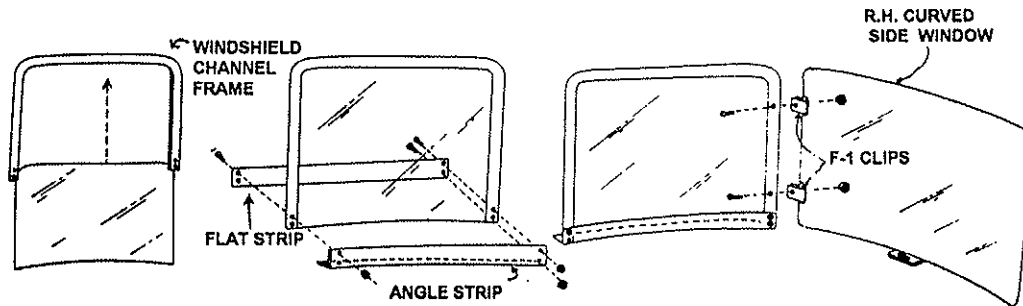

1. Slide glass in channel of windshield frame.
2. Assemble flat strip and angle strip to windshield channel using two 3/16" x 1/2" bolts in top holes and 1/4" x 1" bolts in lower holes. Tighten nuts.
3. Cuts slots in vinyl as shown in picture, insert F-1 clips in slots of R.H. curved side window. Secure this assembly to windshield channel frame with 3/16" x 3/4" bolts.

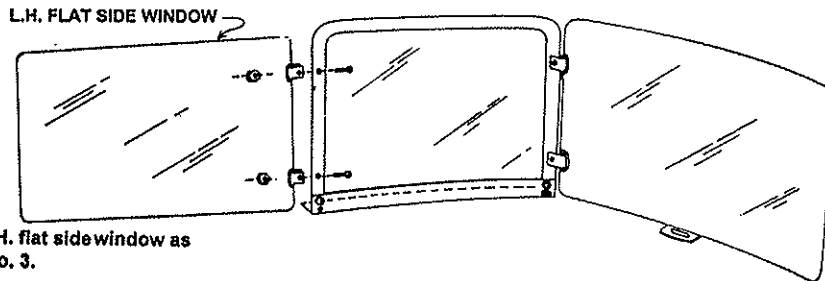

4. Install L.H. flat side window as in step No. 3.

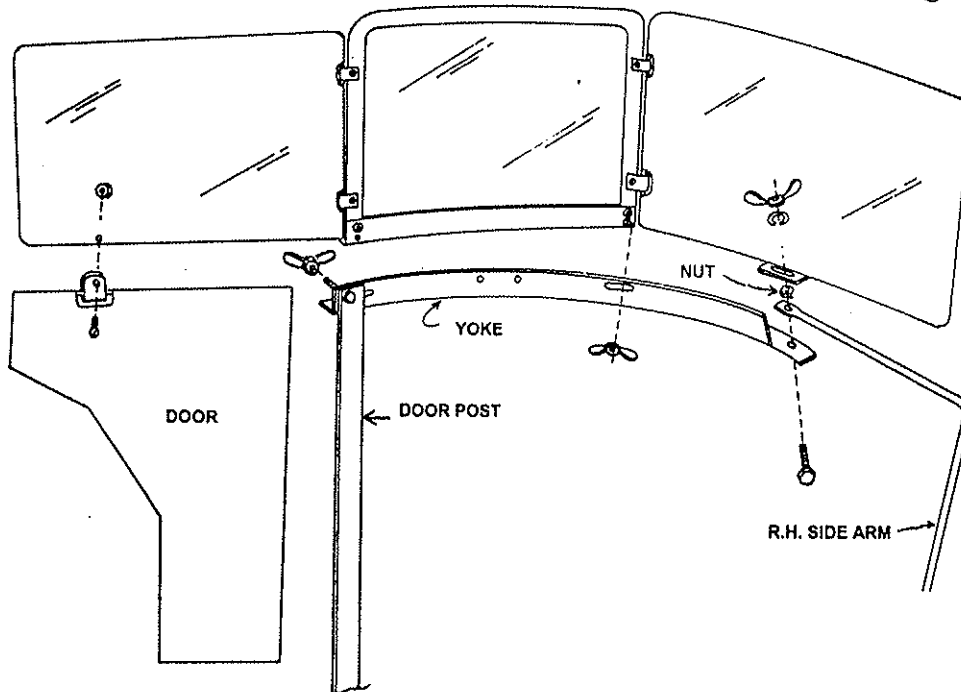

5. Place windshield assembly on yoke so bolt in lower right hand corner of windshield fits into slot in yoke. Place hole in lower left corner over bolt in top of door post. Secure with wing nuts.
6. Secure right side window to rear edge of yoke as shown using flat lock washer and nut.
7. Insert F-1 clip in cut out in top of door, punch hole through canvas in L.H. flat side window as shown. Secure with 3/16" X 3/4" bolt.

FEMCO, Inc.

GENERAL OFFICES
500 North 81 By-Pass
P.O. Box 1186
McPherson, Kansas 67460
Phone: 1-316-241-3513
FAX: 1-316-241-3532
Toll Free: 1-800-677-0898

Subsidiaries
HINSON-FEMCO
JANTZ-FEMCO
FEMCO PLASTICS
AMERICAN PRIDE
GOLF PRODUCTS