


# WINDSHIELD ASSEMBLY INSTRUCTIONS

## For #305021243 & 307021252

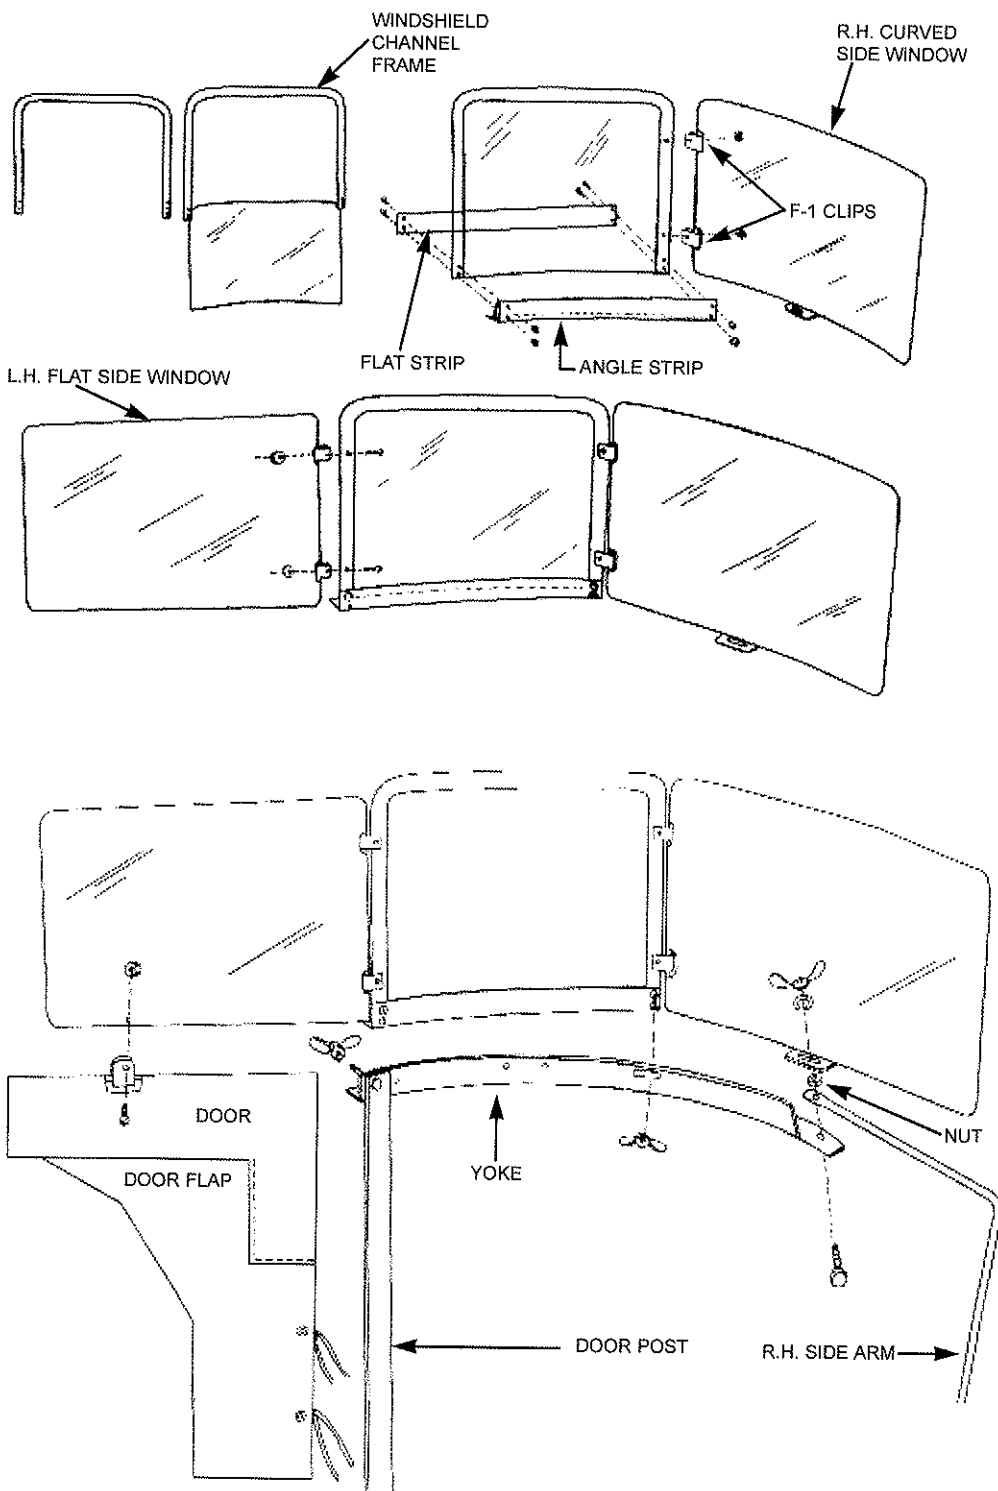

1. Slide glass into channel of windshield frame.
2. Fasten the flat strip and angle strip to windshield channel using two 3/16" x 1/2" bolts in top holes and 1/4" x 1" bolts in lower holes. Tighten nuts.
3. Cut slots in vinyl as shown in picture, insert F-1 clips in slots of R.H. curved side window. Secure this assembly to windshield channel frame with 3/16" x 3/4" bolts.
4. To install L.H. side window see step No. 3.
5. Place windshield assembly on yoke so bolt in lower right corner of windshield fits into slot in yoke. Place hole in lower left corner over bolt in top of door post. Secure with wing nuts.
6. Secure the right side window to rear edge of yoke and side arm as shown using flat lockwasher, nut and wing nut.
7. Insert F-1 clip in cut out in top of door, punch hole through vinyl in L.H. side window as shown. Secure it with a 3/16" x 3/4" bolt.

**NOTE: Door and door flap shape and size might be different than the model shown.**

**FEMCO, Inc.**

**GENERAL OFFICES**  
 500 North 81 By-Pass  
 McPherson, Kansas 67460  
 Phone: (316) 241-3513  
 FAX: 1-316-241-3532  
 Toll Free: 1-800-677-0898

*Subsidiaries*  
**HINSON-FEMCO**  
**FEMCO PLASTICS**

203064000 / 8-98

