



ASSEMBLY INSTRUCTIONS

Canopy #312023278
For John Deere Gators

Requires #301013277 ROPS to fit Canopy on unit

*If Canopy is to be installed **with** the enclosure, use the enclosure instructions for installation.*



IMPORTANT

Read and understand all of the instructions before installing the canopy. Do not tighten hardware until instructed to do so.




FRONT FRAME

1. Remove two (2) bolt from top of dash on unit.
2. Attach front frame (A) to front of unit using two (2) M6 x 65 mm bolts, 1/4" flat washers and lock washers.
3. **TIGHTEN BOLTS.**

ROOF MOUNT

1. Set roof on unit.
2. Position front bracket (A) over front frame and mark hole location.
3. Drill two (2) 9/32" diameter holes into roof.
4. Attach front bracket using one (1) 1/4" x 1" bolt, large flat washer, rubber washer and nut to top of roof. One (1) 1/4" x 1" bolt and nut to front of roof.
5. Repeat procedure for the other side.

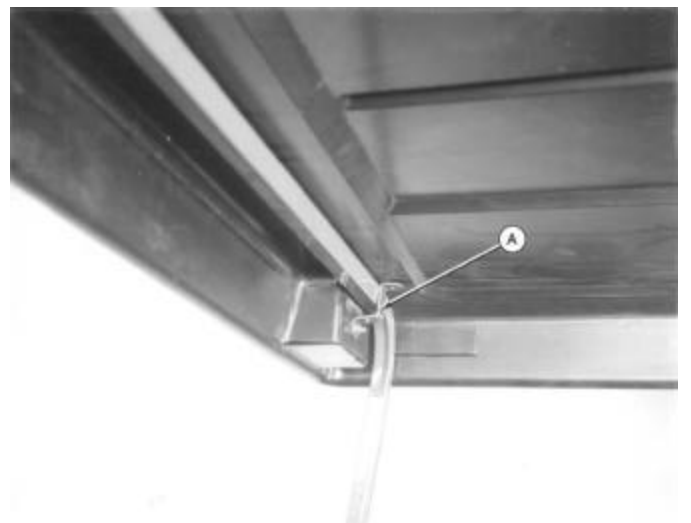




ROOF REAR

IMPORTANT: Remove top bolt from screen.
Leave screen in place

1. Attach rear bracket (A) to screen using same bolt removed.
2. Using rear bracket as template, drill one (1) 9/32" diameter hole.
3. Attach rear bracket to roof using one (1) 1/4" x 1" bolt, large flat washer, rubber washer and nut
4. Repeat procedure for the other side.
5. **TIGHTEN ALL BOLTS.**

REFLECTORS

1. Apply four (4) amber reflectors (A) to sides of roof.
2. Apply two (2) red reflectors (B) to back of roof
3. **CHECK AND TIGHTEN ALL HARDWARE.**

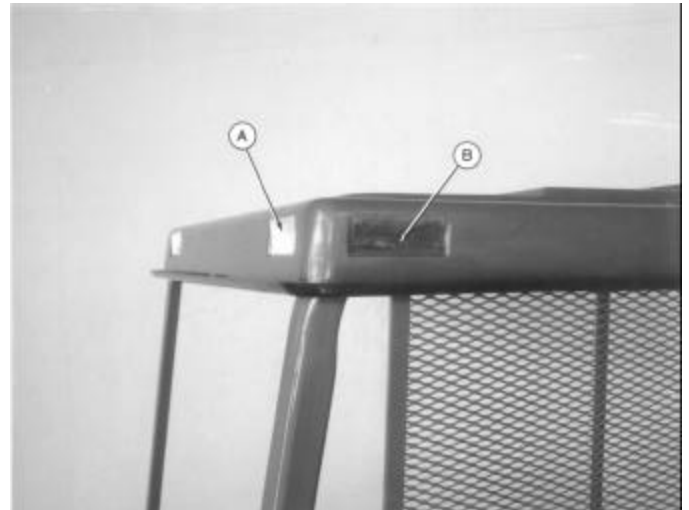

More information regarding this or any of our other products
may be obtained through our web site

www.femcomfg.com

or email

femco@femcomfg.com



GENERAL OFFICES
500 North 81 By -Pass
McPherson, KS 67460
Phone: 1-800-677-0898
Fax: (620) 241-3532
Web: www.femcomfg.com
Email: femco@femcomfg.com